



American Specialties, Inc.

Model #04684-9

Technical Data Sheet

**Dual (15) Napkin/ (23) Tampon Vendor – Surface Mounted – 25¢ - 50¢ or Free Operation**

Feminine Hygiene Vendors and Disposals

MasterFormat Section 10 28 13




Scan for  
Information



**SUSTAINABILITY/LEED**

MR 4.1 (1) MR 6 (1) EQ 4.2 (1)

MR 4.2 (1) EQ 4.1 (1) EQ 4.4 (1)

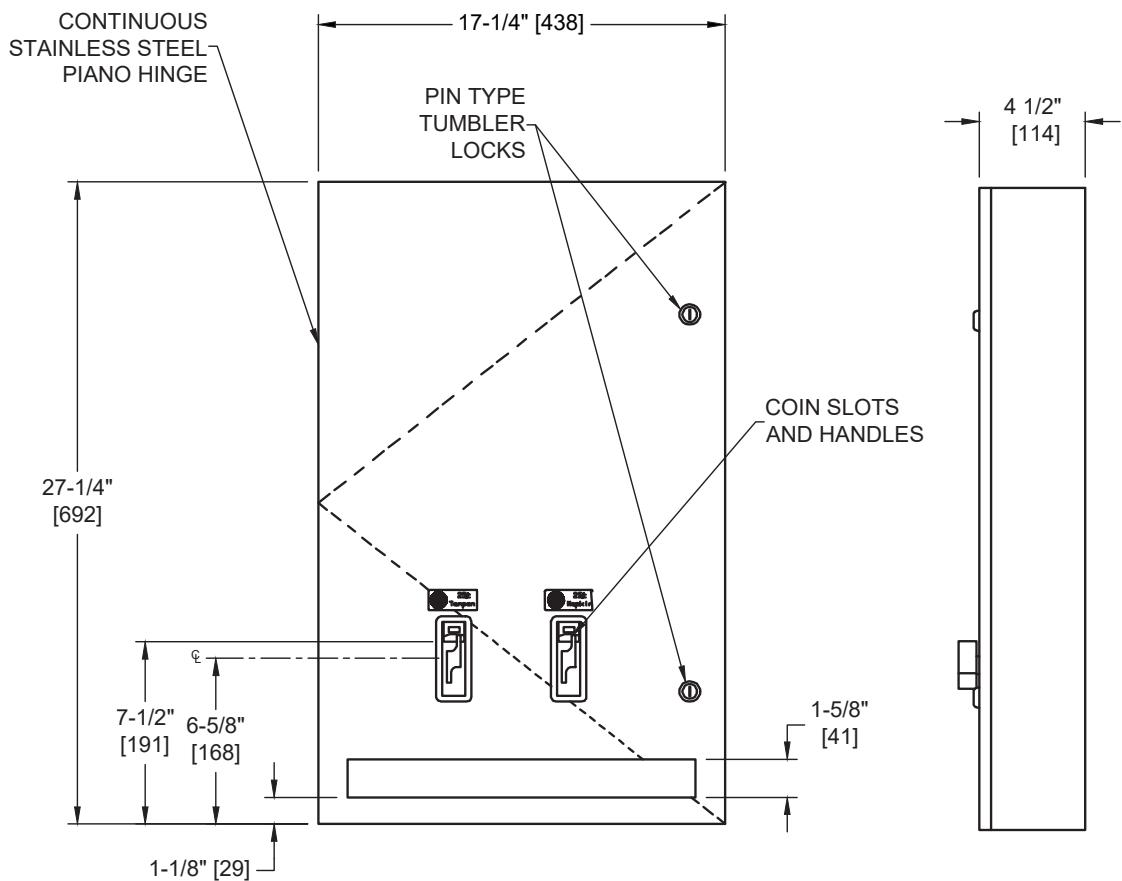

**NOTE:**  
ALL DIM'S INCH [MM]  
ILLUSTRATION FOR REF ONLY AND NTS  
FOR CLEANING INSTRUCTIONS SEE APPROPRIATE SECTIONS IN  
PRODUCT CARE & MAINTENANCE BULLETIN (PCM) ON ASI WEBSITE

**PRODUCT OVERVIEW**

Dispenses 15 napkins, 23 tampons. Doors are held closed with two (2) tumbler locks. Internal coin-box is keyed differently than door locks. Dispensing mechanisms are fastener mounted internally to provide ability to change mechanisms for coinage denomination. Weights for each feed track are supplied. Surface mounted with 22 gauge stainless steel collar. Universal coin mechanism allows for 25¢, 50¢ and Free (no coin) operation. Choose appropriate suffix (-25, -50 or -F). Door and cabinet shall be fabricated of 18 gauge type 304 stainless steel alloy 18-8. Door shall be attached with a full length 3/16" diameter [ $\varnothing$ 4.8] stainless steel multi-staked piano hinge and shall be held closed with two (2) tumbler locks keyed alike to other ASI washroom equipment.

**KEY FEATURES & SPECIFICATIONS**

- Dual Vendor
- 25¢ - 50¢ or Free Operation
- Type 304 Stainless Steel - Satin Finish
- Surface Mounted - w/ -9 Collar
- 15 Napkins AND 23 Tampons
- 04684-9-25 – allows for 25¢ operation
- 04684-9-50 – allows for 50¢ operation
- 04684-9-F – allows Free (no coin) operation

## **OPERATION & MAINTENANCE**

Deposit of specified coin allows operation of dispenser. Napkin and tampon dispensers operate independently. Selected product drops into vending opening after operator actuation. Indicator displays empty condition and blocks coin slot when product is depleted. Unit vend product supply is replenished on cycle determined by maintenance needs by opening door and manually reloading product into dispenser supply tracks. Locked compartment prevents unauthorized access. Track weights MUST BE USED to provide positive feed.

## **TECHNICAL INFORMATION / PRODUCT PROPERTIES**

## **INSTALLATION**

Collar slides over rear of cabinet and under the 1/4" [6] return of the mating cabinet. Assembly of collar and cabinet is then placed on mounting location using four (4) #10Ax1-1/2", self-threading pan head screws (by others).

## **WARRANTY**

One (1) Year from date of Invoice