

Stainless Steel Sharps Disposal Cabinet – Recessed (container not included)

Healthcare Accessories

MasterFormat Section 10 28 13




Scan for
Information



SUSTAINABILITY/LEED

MR 4.1 (1) MR 6 (1) EQ 4.2 (1)

MR 4.2 (1) EQ 4.1 (1) EQ 4.4 (1)

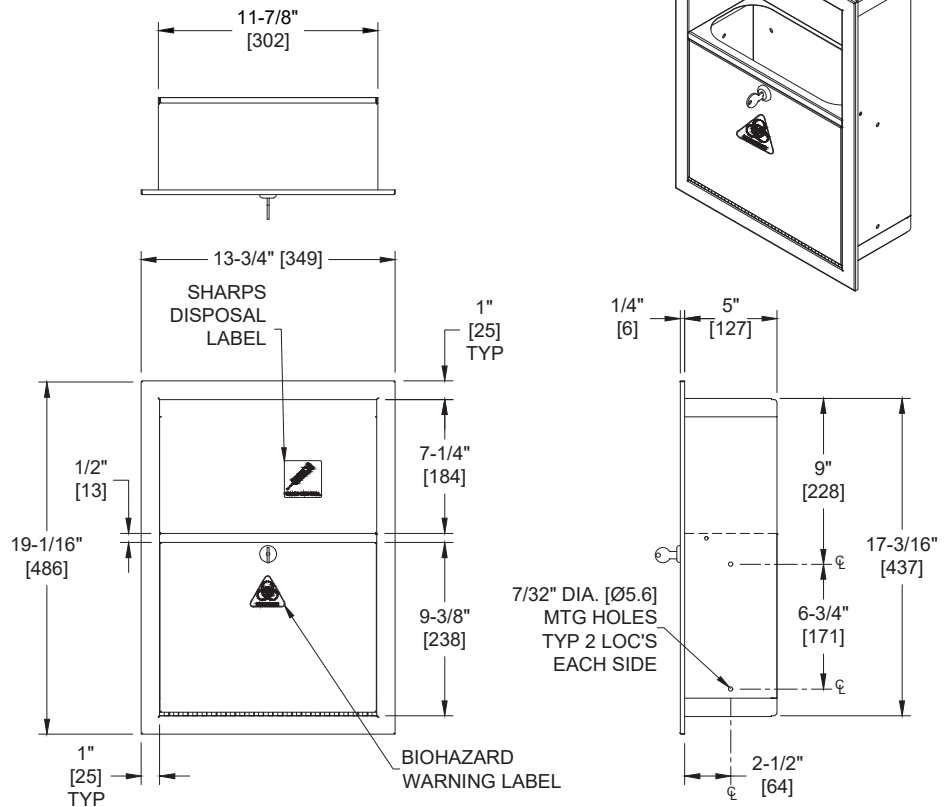

NOTE:
ALL DIM'S INCH [MM]
ILLUSTRATION FOR REF ONLY AND NTS

PRODUCT OVERVIEW

Accommodates one (1) Becton, Dickinson and Company (BD) Brand Sharps Collector model 305443 (by others). Marked with graphic label indicating Biohazard. Door attached to the cabinet at bottom and is held closed with a tumbler lock. Sharps collector is not included.

KEY FEATURES & SPECIFICATIONS

- Sharps
- 18 gauge Type 304 Stainless Steel - Satin Finish
- Heavy duty stainless steel multi-staked 3/16" diameter [Ø5] piano hinge holds door in place with tumbler lock
- Recessed
- Container not included

OPERATION & MAINTENANCE

Sharps (by others) are deposited through top of Sharps Collector (BD model 305443, by others) as per instructions supplied with the specified model. Sharps Collector is replaced manually on cycle determined by maintenance needs. Locked cabinet prevents unauthorized removal.

TECHNICAL INFORMATION / PRODUCT PROPERTIES

Property	Value
Dimensions	13-3/4" [349] W x 19-1/16" [466] H x 5-1/4" [133] D
Construction	Type 304 Stainless Steel - Satin Finish
Mounting	Recessed
Capacity	Accommodates one (1) Becton, Dickinson & Company Brand Sharps Collector, model #305443 (by others)

INSTALLATION

Unit is mounted in wall recess using four (4) #10 screws (by others) through mounting holes provided in cabinet sides. For compliance with 2010 ADA Accessibility Standards, install unit so that bottom of rough wall opening (RWO) is 35-3/4" [908] maximum above finished floor (MAX AFF). Note that bottom of RWO is 9/32" [7] below bottom of cabinet. For general utility, install unit with bottom of RWO at 38" [965] MAX AFF.

Rough Wall Opening (RWO) required is 12-1/8" [308] W x 17-3/4" [451] H x 5" [127] D minimum

WARRANTY

One (1) Year from date of Invoice